

PK-F30LA1

Lens adaptor



Overview

Designed as an additional adapter for use with Sony projector

Before you attach the lens adaptor make sure you first confirm that it is usable with your projector by reading the operating instructions supplied with the projector. These instructions will also provide the information you need for attaching the lens adaptor.

Please note that attaching the lens adaptor and lens may cause fire or injury and you should request that a qualified Sony representative attaches them.

Lenses can be scratched easily so when handling them always place them gently on a stable, level surface in a horizontal position and avoid touching the lens surface.

Gallery

