

## SMAD-P3

Multi Interface Shoe (MI Shoe)  
adaptor for URX-P03



### Overview

The wireless receiver of the URX-P03 can be attached to camcorders or interchangeable-lens cameras that have an MI (Multi-Interface) shoe using the MI shoe adaptor SMAD-P3. This eliminates the need for connecting cables. By using the MI shoe adaptor, audio signals can be transmitted from the wireless receiver to a camera. In addition, the wireless receiver can get power from the camera and the camera can control power ON/OFF, unifying power management.

The SMAD-P3 is applicable to XDCAM Camcorder PXW-Z280/Z190, PXW-X180/X160, PXW-X280/X200\*, PXW-Z150\*\*, PXW-FX9, PXW-FS7\*\*\*, PXW-FS7II\*\*\*, PXW-FS5, PXW-FS5II, PXW-Z90 and PXW-X70, NXCAM Camcorder HXR-NX5R, HXR-NX100, HXR-NX80 and HXR-MC2500, Cinema Line Cameras IMLE-FX6V and ILME-FX3\*\*\*\*, Handycam\*\*\*\* FDR-AX700, FDR-AX100\*\*\*\*\*, FDR-AX60, FDR-AX45, NEX-VG900 and NEX-VG30, interchangeable lens digital camera\*\*\*\*  $\alpha$ 7,  $\alpha$ 7II,  $\alpha$ 7III,  $\alpha$ 7IV,  $\alpha$ 7R,  $\alpha$ 7RII,  $\alpha$ 7RIII,  $\alpha$ 7RIV,  $\alpha$ 7S,  $\alpha$ 7SII,  $\alpha$ 7SIII,  $\alpha$ 7C,  $\alpha$ 9,  $\alpha$ 9II,  $\alpha$ 1,  $\alpha$ 99,  $\alpha$ 99II,  $\alpha$ 6000,  $\alpha$ 6300,  $\alpha$ 6400,  $\alpha$ 6500 and  $\alpha$ 6600, plus Cyber-shot\*\*\*\* DSC-RX10, DSC-RX10II, DSC-RX10III and DSC-RX10IV. (as of March 2022)

\* PXW-X200 firmware should be upgraded to Ver.2.00 or later for using SMAD-P3.

\*\* When using with PXW-Z150 or HXR-NX5R operated by AC power, please set a battery on the camera. Without a battery, we

do not guarantee the power supply function or power ON/OFF control function. In that case, insert new AA alkaline batteries in the receiver and set the receiver's power select (PWR SOURCE) menu item to BATT ONLY mode to avoid an unexpected shutdown of the camera or data loss.

\*\*\* PXW-FS7/ FS7II : Noise may be detected when the GPS function is ON.

\*\*\*\* When used in conjunction with some camera models (all Handycam, interchangeable lens digital camera Cyber-shot and ILME-FX3), operation of the power supply function and the power ON/OFF control function is not guaranteed. Insert new AA alkaline batteries in the receiver, and set the receiver's power select (PWR SOURCE) menu item to BATT ONLY mode to avoid unexpected shutdown of the camera or data loss. (The menu items differ in older versions of the URX-P03 software. In such cases, set the priority power selection (POWER SEL) menu item to BATTERY mode.)

\*\*\*\*\* FDR-AX100: Media access noise may be detected when you use high-speed memory card.

## Features

### **No need for separate XLR cable**

Using an MI Shoe connection, the audio signal from a UWP-D11 or UWP-D12 wireless microphone package can be input from the wireless microphone receiver to the camera without an XLR cable.

### **Power can be supplied by camera**

Power can be switched on and off from the camera/camcorder.

## Related products



**UWP-D11**



**UWP-D12**



**UWP-D16**



**URX-P03**

UWP-D bodypack  
wireless microphone  
package

UWP-D handheld  
wireless microphone  
package

UWP-D bodypack and  
XLR plug-on wireless  
microphone package

UWP-D portable  
receiver

## Gallery

