

アングルケースキット

取扱説明書



3620255040

XCK-L555

Sony Corporation ©2002 Printed in Japan

本キットには、以下の部品が含まれています。


- アングルケースA/B
- ネジ[+K2×4:4本](XC-555/555P用)
- ネジ[+K2×2.5:4本](XC-505/505P用)

お買い上げいただきありがとうございます。本キットは、CCDカメラモジュールXC-555/555P/505/505P用Lアングルケースキットです。本キットを装着することにより、XC-555/555P/505/505Pでは横型(HL)へのアングルの変更が可能です。装着に関しては、お買い求めの販売店にご相談ください。お客様が本キットを装着された場合には保証対象外となりますので、ご注意ください。

寸法図


XC-555/555P/505/505Pへの装着は、HL(横型)のみ可能です。縦型への変更はできません。

■555HL

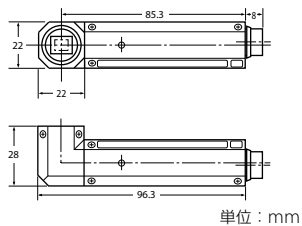

単位: mm

■505HL

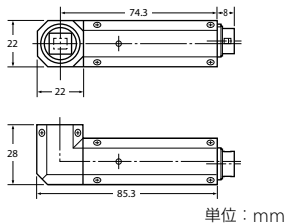


単位: mm


アングルタイプ

CCDブロックには撮像面の上を示す●印がついています。下図は撮像面を正面から見て●印が上となる場合の図です。
ディップスイッチ: 背面

■555HL



■505HL



装着のしかた


アングルケースA/B、ネジを使用します。

* 横型(HL)のみ可能。アングルケースの取り付け方向、挿入方向は「アングルタイプ」を参照。


ここでは、XC-555/555Pへ装着する図を使って説明していますが、XC-505/505Pの場合も同様の手順で装着できます。

XC-505/505Pでは、ネジ穴の位置と、使用するネジの種類が違います。詳しくは、各手順の説明をご覧ください。

- 1 カメラ本体のフロント側ネジ[+K2×2.5] 4本(XC-505/505Pでは[+PM1.7×3] 4本)をはずす。
フレキシブルケーブルの反力でフロントブロックが飛び出します。

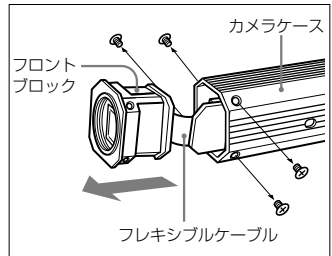


- 2 アングルケースBをフロントブロック下側に取り付ける。

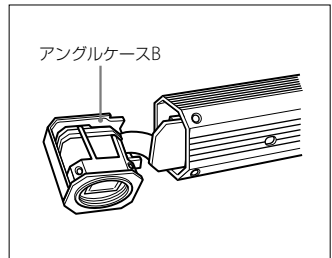


ご注意

フロントブロックを無理に引き出さないでください。無理に引き出すと、フレキシブルケーブルが損傷することがあります。

- 3 アングルケースAをフロントブロックに取り付ける。

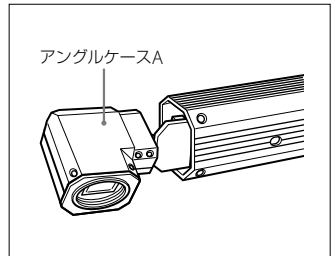


- 4 フロントブロックをカメラケースの中に組み込み、付属のネジ[+K2×4] 4本(XC-505/505Pでは手順1ではずした[+PM1.7×3] 4本)でしっかりと留める。

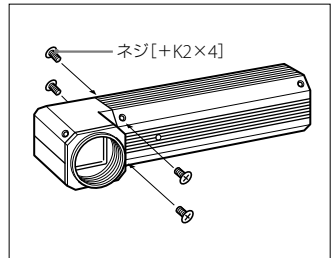

ご注意

ネジの締め付けトルクは、XC-555/555Pでは0.18N・m、XC-505/505Pでは0.15N・mにしてください。

- 5 手順1ではずしたネジ[+K2×2.5] 4本(XC-505/505Pでは、付属のネジ[+K2×2.5] 4本)で、アングルケースA/Bとフロントブロックをしっかりと留める。

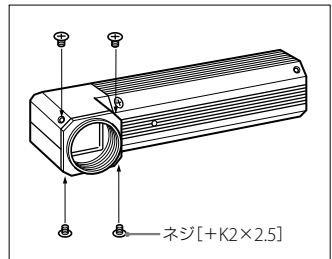

ご注意

ネジの締め付けトルクは0.18N・mにしてください。

お問い合わせ
ソニー株式会社
イメージング・プロダクツ&ソリューションセクター
デジタルイメージング事業本部
ビジュアルセキュリティ・ソリューション事業部
神奈川県厚木市旭町4-14-1 〒243-0014
Tel. 050-3809-2973
<http://www.sony.co.jp/ISPJ/>

ソニー株式会社 〒108-0075 東京都港区港南1-7-1 Printed in Japan

<http://www.sony.net/>

この説明書は、再生紙を使用しています。
Printed on recycled paper.

Angle Case Kit

Instructions

XCK-L555

This kit consists of the following parts.

- Angle case (A)/(B)
- Screw [+K2×4: 4pcs]
(for the XC-555/555P)
- Screw [+K2×2.5: 4pcs]
(for the XC-505/505P)

XCK-L555 is an L angle case kit for the CCD camera module, XC-555/555P/505/505P. This kit allows you to bend the XC-555/555P/505/505P 90 degrees horizontally. See the installation directions below. The angle case kit must be installed by an authorized dealer. Please contact the dealer from whom you purchased the kit. Kits installed by the user are not covered by the warranty.

For the customers in the U.S.A.
SONY LIMITED WARRANTY - Please visit <http://www.sony.com/psa/warranty> for important information and complete terms and conditions of Sony's limited warranty applicable to this product.

For the customers in Canada
SONY LIMITED WARRANTY - Please visit <http://www.sonybiz.ca/solutions/Support.do> for important information and complete terms and conditions of Sony's limited warranty applicable to this product.


For the customers in Europe
Sony Professional Solutions Europe - Standard Warranty and Exceptions on Standard Warranty. Please visit <http://www.pro.sony.eu/warranty> for important information and complete terms and conditions.

For the customers in Korea
SONY LIMITED WARRANTY - Please visit <http://bpeng.sony.co.kr/handler/BPAS-Start> for important information and complete terms and conditions of Sony's limited warranty applicable to this product.


Dimensions

You can install XC-555/555P/505/505P in only HL (horizontal) directions. VL (vertical) is not available with this model.

■ 555HL

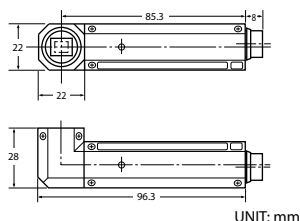


■ 505HL

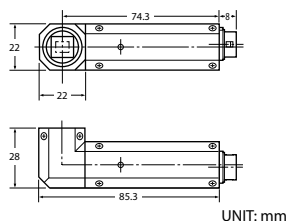


Angle Type

On the upper position of the CCD block ● is located. Set the direction correctly while looking at the CCD block from the front so that ● is in the upper position. Dip switch : rear

■ 555HL



■ 505HL



Installation


Use angle case A/B and screws.

* Only horizontal (HL) direction is available. See the above "Angle Type" concerning with the inserting or connecting direction.


Illustrations of the XC-555/555P are used in this explanation, but you can install the XC-505/505P using the same procedure.

The screw hole positions and type of screws used on the XC-505/505P are different. For details on the differences, refer to each step.

- 1 Remove the four screws [+K2×2.5] from the front panel. (For the XC-505/505P, remove the four screws [+PM1.7×3].) The front block will pop out due to pressure from the flexible cable.

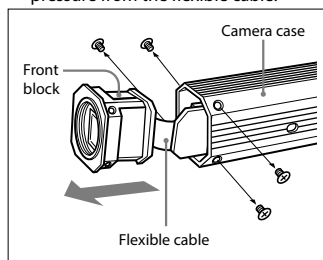


- 2 Attach the angle case (B) to the underside of the front block.

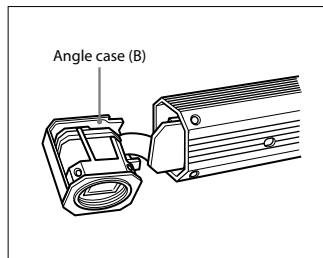


Note

Do not pull the front block out forcibly. If you do so, you may damage the flexible cable.

- 3 Attach the angle case (A) to the front block.

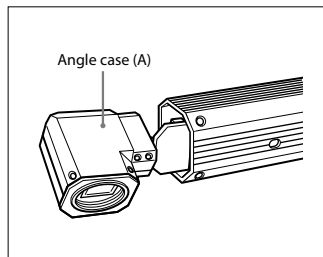


- 4 Insert the front block into the camera case, and attach it securely using the four screws [+K2×4] provided. (For the XC-505/505P, use the four screws [+PM1.7×3] removed in step 1.)

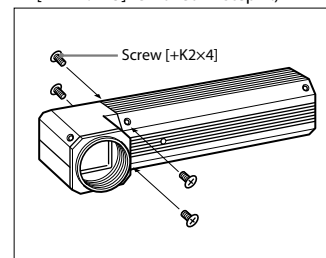

Note

Tighten the screws to a torque level of 0.18 N·m for the XC-555/555P, or 0.15 N·m for the XC-505/505P.

- 5 Using the four screws [+K2×2.5] removed from the front panel in step 1, attach the angle case (A/B) and the front block securely. (For the XC-505/505P, use the four screws [+K2×2.5] provided.)

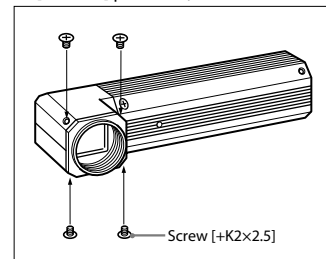

Note

Tighten the screws to a torque level of 0.18 N·m.



For Customer in China

根据中华人民共和国信息产业部第39号令《电子信息产品污染控制管理办法》及标准中要求的“有毒有害物质或元素名称及含量”等信息，本产品相关信息请参考以下链接：
<http://pro.sony.com.cn>

出版日期：2013年11月